


# MultiConnect<sup>®</sup> rCell 100 Series Router LTE Cat 4

## MTR-L4G1 Hardware Guide

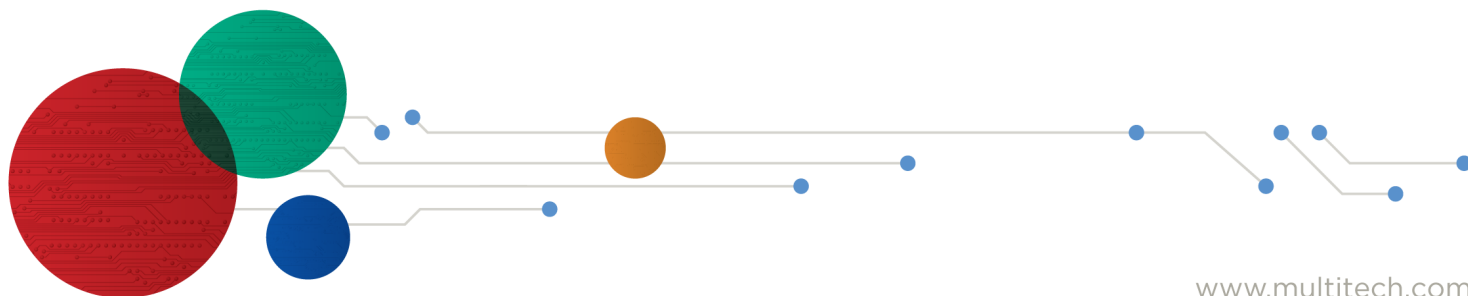

## MultiConnect rCell 100 Series Router Hardware Guide

Model: MTR-L4G1

Part Number: S000789 Rev. 1.2

### Copyright

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. **Copyright © 2024 by Multi-Tech Systems, Inc.**

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement.

Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

### Trademarks and Registered Trademarks

Multi-Tech, and the Multi-Tech logo, and DeviceHQ, and MultiConnect, and Conduit, and mPower are trademarks and registered trademarks of Multi-Tech Systems, Inc. All other products and technologies are the trademarks or registered trademarks of their respective holders.

### Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of Multi-Tech Systems, Inc.. Multi-Tech Systems, Inc. provides this document “as is,” without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Multi-Tech Systems, Inc. may make improvements and/or changes in this manual or in the product(s) and/or the software described in this manual at any time.

### Legal Notices

The MultiTech products are not designed, manufactured or intended for use, and should not be used, or sold or re-sold for use, in connection with applications requiring fail-safe performance or in applications where the failure of the products would reasonably be expected to result in personal injury or death, significant property damage, or serious physical or environmental damage. Examples of such use include life support machines or other life preserving medical devices or systems, air traffic control or aircraft navigation or communications systems, control equipment for nuclear facilities, or missile, nuclear, biological or chemical weapons or other military applications (“Restricted Applications”). Use of the products in such Restricted Applications is at the user’s sole risk and liability.

MULTITECH DOES NOT WARRANT THAT THE TRANSMISSION OF DATA BY A PRODUCT OVER A CELLULAR COMMUNICATIONS NETWORK WILL BE UNINTERRUPTED, TIMELY, SECURE OR ERROR FREE, NOR DOES MULTITECH WARRANT ANY CONNECTION OR ACCESSIBILITY TO ANY CELLULAR COMMUNICATIONS NETWORK. MULTITECH WILL HAVE NO LIABILITY FOR ANY LOSSES, DAMAGES, OBLIGATIONS, PENALTIES, DEFICIENCIES, LIABILITIES, COSTS OR EXPENSES (INCLUDING WITHOUT LIMITATION REASONABLE ATTORNEYS FEES) RELATED TO TEMPORARY INABILITY TO ACCESS A CELLULAR COMMUNICATIONS NETWORK USING THE PRODUCTS.

### Contact Information

General Information	<a href="mailto:info@multitech.com">info@multitech.com</a> <a href="https://multitech.com/contact-us/">https://multitech.com/contact-us/</a>
Sales	+1 (763) 785-3500 <a href="mailto:sales@multitech.com">sales@multitech.com</a>
Technical Support Portal	+1 (763) 717-5863 <a href="https://support.multitech.com">https://support.multitech.com</a>
Warranty	<a href="https://multitech.com/warranty/">https://multitech.com/warranty/</a>
Website	<a href="http://www.multitech.com">www.multitech.com</a>
World Headquarters	2205 Woodale Drive Mounds View, MN 55112 USA

# Contents

<b>Chapter 1 – Product Overview .....</b>	<b>5</b>
About MultiConnect rCell 100 Series Router .....	5
Documentation .....	5
Dimensions.....	6
Descriptions of LEDs.....	7
Ethernet LED Descriptions .....	7
Side Panel Connectors .....	9
Product Build Options .....	10
MTR-L4G1 Specifications .....	10
Transmission Output Power.....	11
For Quectel EG25 (L4G1).....	11
Power Draw.....	13
<b>Chapter 2 – Safety Warnings.....</b>	<b>15</b>
Lithium Battery .....	15
User Responsibility.....	15
Power Supply Caution .....	15
Device Maintenance .....	15
Vehicle Safety.....	16
Radio Frequency (RF) Safety .....	16
Interference with Pacemakers and Other Medical Devices .....	17
Potential interference .....	17
Precautions for pacemaker wearers .....	17
Notice regarding Compliance with FCC, EU, and Industry Canada Requirements for RF Exposure.....	17
<b>Chapter 3 – Antenna Information .....</b>	<b>18</b>
Antenna.....	18
Antenna Specifications .....	18
LTE Antenna MISO .....	18
Selecting Antennas .....	19
Placing External Antennas .....	19
Placing GPS Antennas .....	19
Antenna Approvals and Safety Considerations .....	19
Power Draw .....	19
<b>Chapter 4 – Carrier Specific Notice.....</b>	<b>20</b>
Firmware Over the Air (FOTA) .....	20
Verizon Requirement: Firmware Over The Air (FOTA) .....	20
<b>Chapter 5 – Installing the Device.....</b>	<b>21</b>
Installing the SIM Card .....	21

Installing the Device .....	21
Mounting the Device.....	22
Resetting the Device .....	22
Restoring User Defined Settings to the Device .....	22
<b>Chapter 6 – Regulatory Information.....</b>	<b>24</b>
47 CFR Part 15 Regulation Class B Devices .....	24
FCC Interference Notice .....	24
Industry Canada Class B Notice.....	24
EMC, Safety, and Radio Equipment Directive (RED) Compliance .....	25
Regulatory Compliance Mark (RCM) for Australia.....	25
Compliance for Hazardous Substances (ROHS3) .....	25
REACH-SVHC Statement .....	25
Registration of Substances.....	25
Waste Electrical and Electronic Equipment Statement .....	25
WEEE Directive.....	25
Instructions for Disposal of WEEE by Users in the European Union .....	26
Information on HS/TS Substances According to Chinese Standards .....	27
Information on HS/TS Substances According to Chinese Standards (in Chinese) .....	28
<b>Revision History .....</b>	<b>29</b>

# Chapter 1 – Product Overview

## About MultiConnect rCell 100 Series Router


This guide describes the MultiConnect rCell 100 Series Router. Use this product to provide secure data communication between many types of devices that use legacy and the latest communication technologies. The device has an integrated cellular modem and includes 10/100 BaseT Ethernet and RS-232 serial connectivity.

## Documentation

The following documentation is available at <http://www.multitech.com/brands/multiconnect-rcell-100-series>.

Document	Description	Part Number
Hardware Guide	This document provides overview, safety and regulatory information, design considerations, schematics, and general hardware information.	S000789
Software Guide	This document provides instructions and information on how to properly configure your device through its user interface.	S000720
API Developer Guide	You can use the rCell API to manage configurations, poll statistics, and issue commands. Documentation is available on the MultiTech Developer Resources website at: <a href="http://www.multitech.net/developer/software/mtr-software/mtr-api-reference/">www.multitech.net/developer/software/mtr-software/mtr-api-reference/</a> .	N/A
Quectel EG9x AT Commands Manual, USB Installation Guides, and other related manuals	Multiple documents listing AT Commands, USB installation guides, and other protocols used to communicate with your LNA7 device. Provided in a zip file.	N/A

## Dimensions

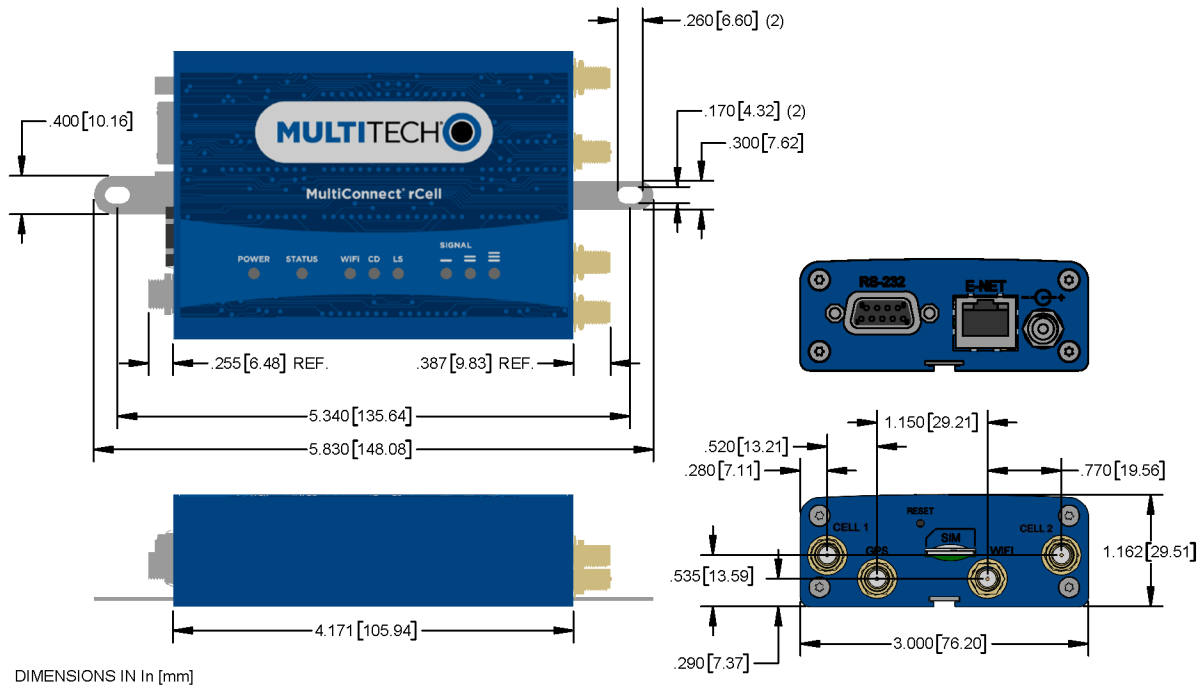

## Descriptions of LEDs

The top panel contains the following LEDs:

- **Power and Status LEDs**—The Power LED indicates that DC power is present and the Status LED blinks when the unit is functioning normally.
- **Wi-Fi**—Indicates if the device is serving as a Wi-Fi access point or acting as a Wi-Fi client. Not all models support Wi-Fi.
- **Modem LEDs**—Two modem LEDs indicate carrier detection and link status.
- **Signal LEDs**—Three signal LEDs display the signal strength level of the wireless connection.
- **Ethernet LEDs**—These LEDs are not on the top panel. See the section Ethernet LED Descriptions for descriptions of these LEDs.

LED Indicators	
POWER	Indicates presence of DC power when lit.
STATUS	The LED is a solid light when the device is booting up, saving the configuration, restarting, or updating the firmware. When the Status LED begins to blink, the device is ready for use.
Wi-Fi	Infrastructure mode: <ul style="list-style-type: none"> <li>■ The Wi-Fi LED is lit when Wi-Fi AP mode is enabled, unlit when disabled.</li> <li>■ The LED flashes rapidly to indicate traffic.</li> </ul> Client mode: <ul style="list-style-type: none"> <li>■ The Wi-Fi LED is lit when Wi-Fi client mode is enabled.</li> <li>■ The Wi-Fi LED blinks slowly when associated with an Access Point.</li> <li>■ The Wi-Fi LED flashes rapidly to indicate traffic.</li> </ul>
CD	Carrier Detect. When lit, indicates data connection has been established.
LS	Link Status  OFF —No power to the cellular radio  Slow Blink (200 ms High/1800 ms Low) — Not registered/searching for network connection  Slow Blink (1800 ms High/200 ms Low) — Idle  Fast Blink (125 ms High/125 ms Low) — Connected/data transfer
SIGNAL	Signal strength for cellular (RSSI range: 0 - 31)  ALL OFF — Unit is off, not registered on network, or extremely weak signal ( $0 \leq \text{RSSI} < 6$ ).  1 Bar "ON" — Very weak signal ( $7 \leq \text{RSSI} < 14$ ).  1 Bar and 2 Bar "ON" — Weak signal ( $15 \leq \text{RSSI} < 23$ ).  1 Bar, 2 Bar, and 3 Bar "ON" — Good signal ( $24 \leq \text{RSSI} \leq 31$ ).

## Ethernet LED Descriptions

Two Ethernet LEDs are physically on the RJ-45 connector(s). The table that follows describes these LEDs.


Ethernet Link	Right LED on Ethernet connector. Blinks when there is transmit and receive activity on the Ethernet link. It shows a steady light when there is a valid Ethernet connection.
Ethernet Speed	Left LED on Ethernet connector. Lit when the Ethernet is linked at 100 Mbps. If it is not lit, the Ethernet is linked at 10 Mbps.




## Side Panel Connectors

The device has connectors on both sides of the housing. The right side of the device contains a SIM card holder, a reset button, a Wi-Fi/Bluetooth, GPS, and cellular antenna connector. Depending on the model of your device, the GPS and/or Wi-Fi connectors may or may not be present.


The following shows the right side panel of the device:

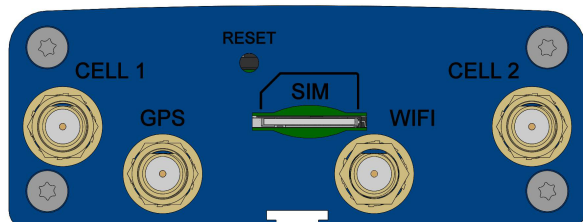

The following shows the left side panel of the device. It includes an RS-232 connector, an Ethernet connector, and the power receptacle.

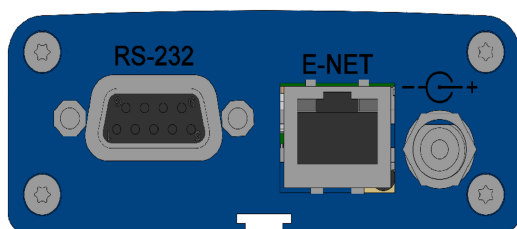

The following table describes the items on the two side panels:

Label	Description
CELL 1, CELL 2	Cellular antenna inputs. Use with 2 Cat 4 LTE antennas.
GPS	GPS antenna input. Use with 1 GPS antenna (varies with model).
WIFI	Wi-Fi/Bluetooth antenna input. Use with 1 Wi-Fi/Bluetooth antenna (varies with model).
SIM	Receptacle for a SIM card (Subscriber Identity Module).
RESET	Resets the device. Refer to <b>Resetting the Device</b> or <b>Resetting User Defined Settings to the Device</b> .
RS-232	DE 9-pin, female-D Sub through-hole connector.
E-NET	RJ-45 receptacle for standard Ethernet 10/100 Base-T (RJ-45 connector has two Ethernet LEDs).
Power 	7-32 VDC power receptacle for provided power cord. The device uses a minimum 7V 1.0A power supply.

## Product Build Options

Product	Description	Carrier/Region
MTR-L4G1-B10	LTE Cat 4 Router with Fallback and Wi-Fi/BT/GPS/, without Accessories	Global
MTR-L4G1-B07	LTE Cat 4 Router with Fallback, without Accessories	Global
MTR-L4G1-B10-WW	LTE Cat 4 Router with Fallback and Wi-Fi/BT/GPS/, and Accessory Kit	Global
MTR-L4G1-B07-WW	LTE Cat 4 Router with Fallback and Accessory Kit	Global

## MTR-L4G1 Specifications

Category	Description
<b>General</b>	
Standards	LTE FDD Cat 4, 3GPP release 11 compliant
	WCDMA/3G fallback
	UMTS/HSPA+
	GSM/GPRS/EDGE
Frequency Bands	LTE FDD: B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B20/B25/B26/B28
	WCDMA: B2/B4/B5
TCP/IP Functions	FTP, HTTPS, DNS, DHCP, SMTP, SNMP, SNTP, SSL, TCP, UDP
SMS over IMS	Point-to-Point messaging, Mobile terminated SMS, Mobile originated SMS
<b>Speed</b>	
Data Speed	LTE FDD: Max 150Mbps (DL)/Max 50Mbps (UL)
	DC-HSDPA: Max 42Mbps (DL)
	HSUPA: Max 5.76Mbps (UL)
	WCDMA: Max 384Kbps (DL)/Max 384Kbps (UL)
	EDGE: Max 296Kbps (DL)/Max 236.8Kbps (UL)
	GPRS: Max 107Kbps (DL)/Max 85.6Kbps (UL)
<b>Interface</b>	
Serial Modem Interface	Up to 921.6 Kbps
<b>Connectors</b>	
Cellular	Female SMA connector
Wi-Fi/Bluetooth	Reverse Polarity Female SMA connector
GPS	Female SMA connector

Category	Description
SIM Holder	Micro (3FF) SIM
Ethernet (LAN)	RJ-45, 10/100 Base T
RS-232	DCE 9-pin, female connector
Power	25 mm miniature locking power jack (screw on)
<b>Power Requirements<sup>1</sup></b>	
Voltage	7 to 32 VDC
<b>Physical Description</b>	
Dimensions	4.17" x 3.0" x 1.15" (10.6cm x 7.6cm x 2.9cm)
Weight	0.51 lbs (0.231 Kg)
Chassis type	Aluminum
<b>Environment</b>	
Operating Temperature <sup>2</sup>	-40° to +80° C
Storage Temperature <sup>2</sup>	-40° to +85° C
Humidity	Relative humidity 15% to 93% non-condensing
<b>Certifications, Compliance, Warranty</b>	
Regulatory	EMC and Radio Compliance, FCC Part 15 Class B, FCC Part 22H, FCC Part 24E, FCC Part 27, ICC, RED (EU), RCM (AU)
Safety	UL 60950-1 2nd ED, cUL 60950-1, IEC 62368-1
Network	Verizon/AT&T/PTCRB

<sup>1</sup>Optional power supply must be a Listed ITE power supply marked LPS or Class 2 rated 1.0 A minimum. Certification does not apply or extend to voltages outside certified range, and has not been evaluated by UL for operating voltages beyond tested range.

<sup>2</sup>UL tested for use at the recommended ambient temperature (Tmra) of 60° C when using a fused cord and 40° C when using the optional power supply. Additionally, if the MTR is installed in a plastic case, the Tmra is up to 50° C or 40° C if used with the optional power supply.

Installation in outdoor locations has not been evaluated by UL. UL Certification does not apply or extend to outdoor applications.

**Note:** Radio performance may be affected at the temperature extremes. This is considered normal. There is no single cause for this function. Rather, it is the result of an interaction of several factors, such as the ambient temperature, the operating mode, and the transmit power.

## Transmission Output Power

### For Quectel EG25 (L4G1)

Band	Max. Output Power	Power Class
LTE-FDD	23dBm±2d	3

Band	Max. Output Power	Power Class
LTE-TDD	23dBm $\pm$ 2dB	3
WCDMA	24dBm+1/-3dB	3
GSM850/EGSM900	33dBm $\pm$ 2dB	4
DCS1800/PCS1900	30dBm $\pm$ 2dB	1
GSM850/EGSM900 (8-PSK)	27dBm $\pm$ 3dB	E2
DCS1800/PCS1900 (8-PSK)	26dBm $\pm$ 3dB	E2

## Power Draw

### MTR-L4G1-B10 Power Draw

Radio Protocol	Live Connection Idle (No Data) (mA)	Average Measured Current (mA) at Maximum Power <sup>1</sup>	TX Pulse (AVG) Amplitude Current for Peak Current for HSDPA/LTE <sup>2</sup>	Total Inrush Charge Measured in Millicoulombs (mC) <sup>3</sup>	Total Inrush Charge DURATION (mS) during Powerup (INRUSH Duration)
<b>9.0 Volts</b>					
GSM850	276	617	1.65A	2.71	38.3
WCDMA 1854Mhz	267	711	816	2.71	38.3
LTE Band 3 1747Mhz	278	785	896	2.71	38.3
<b>12.0 Volts</b>					
GSM850	210	443	1.25A	1.87	34.2
WCDMA 1854Mhz	205	518	604	1.87	34.2
LTE Band 3 1747Mhz	207	580	652	1.87	34.2
<b>24.0 Volts</b>					
GSM850	108	224	600	.818	34.9
WCDMA 1854Mhz	105	258	324	.818	34.9
LTE Band 3 1747Mhz	106	288	356	.818	34.9
<b>48.0 Volts</b>					
GSM850	60	127	300	.375	38.2
WCDMA 1854Mhz	58	147	212	.375	38.2
LTE Band 3 1747Mhz	62	152	232	.375	38.2

<sup>1</sup>**Maximum Power:** The continuous current during maximum data rate with the radio transmitter at maximum power.

<sup>2</sup>**Tx Pulse:** The average peak current during a GSM850 transmission burst period or HSDPA/LTE connection. The transmission burst duration for GSM850 can vary, depending on what transmission scheme is being deployed (GPRS Class 8, Class 10, GSM, etc.).

<sup>3</sup>**Total Inrush Charge:** The total inrush charge at power on.

**Note:** Multi-Tech Systems, Inc. recommends that you incorporate a 10% buffer into the power source when determining product load.

## Chapter 2 – Safety Warnings

### Lithium Battery

- A lithium battery (3V, coin cell, CR1632) located within the product provides backup power for the timekeeping. If the device is left powered off, the battery lasts approximately 90 days.
- When this battery starts to weaken, the date and time may be incorrect.
- Battery is not user replaceable. If the battery fails, the device must be sent back to MultiTech Systems for battery replacement.
- Lithium cells and batteries are subject to the Provisions for International Transportation. Multi-Tech Systems, Inc. confirms that the Lithium batteries used in the MultiTech product(s) referenced in this manual comply with Special Provision 188 of the UN Model Regulations, Special Provision A45 of the ICAO-TI/IATA-DGR (Air), Special Provision 310 of the IMDG Code, and Special Provision 188 of the ADR and RID (Road and Rail Europe).

**CAUTION:** Risk of explosion if this battery is replaced by an incorrect type. Dispose of batteries according to instructions.

**Attention:** Risque d'explosion si vous remplacez la batterie par un modèle incompatible. Jetez les piles usagées selon les instructions.

### User Responsibility

Respect all local regulations for operating your wireless device. Use the security features to block unauthorized use and theft.

End user must operate product per country laws and rules

### Power Supply Caution

**CAUTION:** Do not replace the power supply with one designed for another product; doing so can damage the modem and void your warranty. Adapter shall be installed near the equipment and shall be easily accessible.

**Avertir:** Pour garantir une protection continue contre les risques d'incendie, remplacez les fusibles uniquement par des fusibles du même type et du même calibre. L'adaptateur doit être installé à proximité de l'appareil et doit être facilement accessible.

**Vorsicht:** Ersetzen Sie das Netzteil nicht durch ein Netzteil, das für ein anderes Produkt vorgesehen ist. Andernfalls kann das Modem beschädigt werden und Ihre Garantie erlischt. Der Adapter muss in der Nähe des Geräts installiert und leicht zugänglich sein.

### Device Maintenance

Do not attempt to disassemble the device. There are no user serviceable parts inside.

When maintaining your device:

- Do not misuse the device. Follow instructions on proper operation and only use as intended. Misuse could make the device inoperable, damage the device and/or other equipment, or harm users.
- Do not apply excessive pressure or place unnecessary weight on the device. This could result in damage to the device or harm to users.

- Do not use this device in explosive or hazardous environments unless the model is specifically approved for such use. The device may cause sparks. Sparks in explosive areas could cause explosion or fire and may result in property damage, severe injury, and/or death.
- Do not expose your device to any extreme environment where the temperature or humidity is high. Such exposure could result in damage to the device or fire. Refer to the device specifications regarding recommended operating temperature and humidity.
- Do not expose the device to water, rain, or spilled beverages. It is not waterproof. Exposure to liquids could result in damage to the device.
- Using accessories, such as antennas, that MultiTech has not authorized or that are not compliant with the device accessory specifications may invalidate the warranty.

If the device is not working properly, contact MultiTech Technical Support.

## Vehicle Safety

When using your device in a vehicle:

- Do not use this device while driving.
- Respect national regulations on the use of cellular devices in vehicles.
- If incorrectly installed in a vehicle, operating the wireless device could interfere with the vehicle's electronics. To avoid such problems, use qualified personnel to install the device. The installer should verify the vehicle electronics are protected from interference.
- Using an alert device to operate a vehicle's lights or horn is not permitted on public roads.
- UL evaluated this device for use in ordinary locations only. UL did NOT evaluate this device for installation in a vehicle or other outdoor locations. UL Certification does not apply or extend to use in vehicles or outdoor applications.

## Radio Frequency (RF) Safety

Due to the possibility of radio frequency (RF) interference, it is important that you follow any special regulations regarding the use of radio equipment. Follow the safety advice given below.

- Operating your device close to other electronic equipment may cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.
- Different industries and businesses restrict the use of cellular devices. Respect restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in process. Follow restrictions for any environment where you operate the device.
- Do not place the antenna outdoors.
- Switch OFF your wireless device when in an aircraft. Using portable electronic devices in an aircraft may endanger aircraft operation, disrupt the cellular network, and is illegal. Failing to observe this restriction may lead to suspension or denial of cellular services to the offender, legal action, or both.
- Switch OFF your wireless device when around gasoline or diesel-fuel pumps and before filling your vehicle with fuel.
- Switch OFF your wireless device in hospitals and any other place where medical equipment may be in use.



## Interference with Pacemakers and Other Medical Devices

### Potential interference

Radio frequency energy (RF) from cellular devices can interact with some electronic devices. This is electromagnetic interference (EMI). The FDA helped develop a detailed test method to measure EMI of implanted cardiac pacemakers and defibrillators from cellular devices. This test method is part of the Association for the Advancement of Medical Instrumentation (AAMI) standard. This standard allows manufacturers to ensure that cardiac pacemakers and defibrillators are safe from cellular device EMI.

The FDA continues to monitor cellular devices for interactions with other medical devices. If harmful interference occurs, the FDA will assess the interference and work to resolve the problem.

### Precautions for pacemaker wearers

If EMI occurs, it could affect a pacemaker in one of three ways:

- Stop the pacemaker from delivering the stimulating pulses that regulate the heart's rhythm.
- Cause the pacemaker to deliver the pulses irregularly.
- Cause the pacemaker to ignore the heart's own rhythm and deliver pulses at a fixed rate.

Based on current research, cellular devices do not pose a significant health problem for most pacemaker wearers. However, people with pacemakers may want to take simple precautions to be sure that their device doesn't cause a problem.

- Keep the device on the opposite side of the body from the pacemaker to add extra distance between the pacemaker and the device.
- Avoid placing a turned-on device next to the pacemaker (for example, don't carry the device in a shirt or jacket pocket directly over the pacemaker).

## Notice regarding Compliance with FCC, EU, and Industry Canada Requirements for RF Exposure

The antenna intended for use with this unit meets the requirements for mobile operating configurations and for fixed mounted operations, as defined in 2.1091 of the FCC rules for satisfying RF exposure compliance. This device also meets the European RF exposure requirements of EN 62311. If an alternate antenna is used, consult user documentation for required antenna specifications.

Compliance of the device with the FCC, EU and IC rules regarding RF Exposure was established and is given with the maximum antenna gain as specified above for a minimum distance of 20 cm between the devices radiating structures (the antenna) and the body of users. Qualification for distances closer than 20 cm (portable operation) would require re-certification.

Wireless devices could generate radiation. Other nearby electronic devices, like microwave ovens, may also generate additional radiation to the user causing a higher level of RF exposure.

## Chapter 3 – Antenna Information

### Antenna

Devices were approved with the following antenna:

Manufacturer:	Wieson
Description:	LTE Antenna with SMA-Male Connector
Model Number	GY115IE002-001

#### MultiTech ordering information:

Model	Quantity
ANLTE4-1HRA	1
ANLTE4-2HRA	2
ANLTE4-10HRA	10
ANLTE4-50HRA	50

### Antenna Specifications

Category	Description
Frequency Range	0.698 - 0.96 GHz 1.710 - 2.170 GHz 2.30 - 2.69 GHz
VSWR	3:1 maximum
Gain	2.06 dBi
Impedance	50Ω nominal
Radiation	Omni-directional
Polarization	Linear, vertical

### LTE Antenna MISO

LTE devices use Multiple Input and Single output (MISO) to improve the downlink connection (cell tower to mobile). It has no effect on the uplink (mobile to cell tower).

**Important:** Always connect all included antennas for increased downlink bandwidth and better signal handling in diverse locations. You must deploy with two antennas, unless your carrier has authorized you to deploy with one antenna.

## Selecting Antennas

Select an antenna based on your product and application. Typically, both antennas are the same and either can be the main receive antenna.

## Placing External Antennas

Antennas are usually a quarter wavelength apart from each other. With multiband radios where the quarter wavelengths in each band are diverse from each other, this rule may not be practical. Choose spacing based on the band used most often or the band with connection difficulty. Some environments are harsher on particular bands. MultiTech products have antenna connectors at the best spacing for the product size.

Placing antennas in close proximity to each other is not optimal, but you can do it if necessary. It depends on the signal strength to and from each antenna.

If the antennas are too close together for your application, use a similar antenna on a short cable for the second receive only antenna.

## Placing GPS Antennas

GPS antennas need a clear view of the sky. Position the GPS antenna so the diversity antennas do not block its view of the sky.

## Antenna Approvals and Safety Considerations

Note the following:

- Carriers conduct antenna diversity tests.
- There are no EMC concerns about antenna diversity.
- All antennas need to have a minimum flammability rating.
- Safety requirements depend on your final product.
- Unless otherwise noted, antennas certified by MultiTech are not approved for outdoor use. Do not extend these antennas outside of any building.

## Power Draw

There are no significant power draw differences.

## Chapter 4 – Carrier Specific Notice

---

### Firmware Over the Air (FOTA)

#### Verizon Requirement: Firmware Over The Air (FOTA)

Also known as Firmware Update Over the Air (FUOTA). At times, your device may require a critical update to radio firmware for devices connecting to the network. To stay compliant to Verizon's requirements you must implement FOTA. Failure to perform a critical update could result in losing access to the Verizon network. For information and examples go to <https://multitech.com/verizon-firmware-over-the-air-fota>.


## Chapter 5 – Installing the Device

### Installing the SIM Card

If you want to operate the device on a particular network, install a SIM card (Subscriber Identity Module).

To install the SIM:

1. Locate the SIM card slot on the side of the device. The slot is labeled SIM.
2. Push the SIM card into the slot until it snaps into place.

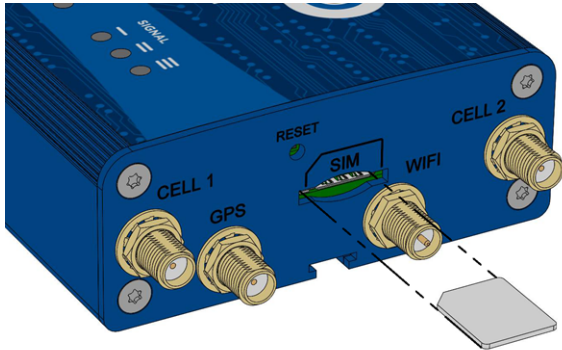

3. To remove the SIM, push the edge of the card in. When released, the card pops out of the device.

### Installing the Device

1. To use the device's cellular features, connect a suitable antenna to the CELL connector.
2. Using an Ethernet cable, connect one end of the cable to the E-NET connector on the back of the device and the other end to your computer, either directly or through a switch or hub.
3. If you are connecting to a serial interface, connect the DE-9 connector (9-pin) of the RS-232 cable to the RS-232 connector on the device. Then connect the other end to the serial port on the desired device.
4. Some devices support the use of a GPS receiver. If you are using a GPS receiver with the device, attach the GPS cable to the GPS connector on the device.
5. Attach a power cable to your power supply module.
6. Screw-on the power lead from the power supply module into the power connection on the device.
7. Plug the power supply into your power source.

The POWER LED lights after the device powers up.

When the Status LED begins to blink, the device is ready for use.

8. You can configure your device by using your device's web management interface. You might need to change the IP address of your computer to be in the same IP and subnet mask range as the device.
  - a. Open a web browser. In the browser's address field, type the default address for the device: <http://192.168.2.1>. (If the browser displays a message that there is a problem with the website's security certificate, ignore this and click **Continue to the webpage**).
  - b. On first-time power up of the device, its Web UI displays the initial setup in commissioning mode requiring a **username** and **password** for the first administrative user. Enter your desired username and password. Refer to **First-Time Setup** for more details.

- c. If you are not powering up the device for the first time and simply upgrading the firmware of your device, your existing logins are still active.

## Mounting the Device

1. Locate the groove on the bottom of the modem.
2. Slide the mounting tab through the groove.
3. To secure the tab to the desired surface, place and tighten two screws in the holes on either end of the mounting tab. The dimensions illustration in this guide shows the mounting tab, as well as the dimensions for placement of the screws.

## Resetting the Device

You need:

- A pin, paperclip, or similar thin object that can fit into the reset hole

The following is the default condition for the RESET button on the device. You can program a change to the behavior of the button if needed.

To reset the device:

1. Find the hole labeled RESET. The reset button is recessed into the case.
2. Use the pin to press and release the RESET button as follows:

Reset options:

- To reboot, press RESET for less than 3 seconds.
- To reboot and restore user-defined defaults (if previously set), press RESET for 3 to 29 seconds.
- To reboot, restore factory settings, and erase user-defined defaults, press RESET for 30 seconds or longer.

The device restarts in commissioning mode. The system automatically removes all user accounts.

Enter a new username and password to create your new administrative account. (Refer to **User Accounts** in the appropriate software guide for details on username and password requirements.)

**Note:** The device reboots when restoring settings.

## Restoring User Defined Settings to the Device

You can restore user defined settings to your device.

You need:

- A pin, paperclip, or similar thin object that can fit into the reset hole
1. Locate the hole in the panel labeled RESET. The reset button is recessed into the housing.
  2. Use the pin to press in the button for about 3 seconds and then release the reset button.
    - a. If you do not press in the button long enough, the device will reset, but the user defined settings will not be restored.

- b. If you hold it too long, factory default settings will be restored.

## Chapter 6 – Regulatory Information

---

### 47 CFR Part 15 Regulation Class B Devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Interference Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### Industry Canada Class B Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

This device complies with Industry Canada license-exempt RSS standard(s). The operation is permitted for the following two conditions:

1. the device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



## EMC, Safety, and Radio Equipment Directive (RED) Compliance



The CE mark is affixed to this product to confirm compliance with the following European Community Directives:

Council Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment;

and

Council Directive 2014/53/EU on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

MultiTech declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be downloaded at <https://multitech.com/product-support/>

## Regulatory Compliance Mark (RCM) for Australia



This product complies with the requirements of the Regulatory Compliance Mark (RCM) for Electrical Regulatory Authorities Council (ERAC), Electrical Equipment Safety System (EESS), and the Australian Communications and Media Authority (ACMA) for Electromagnetic Compatibility (EMC).

## Compliance for Hazardous Substances (ROHS3)

Multi-Tech Systems, Inc. confirms that all products comply with the chemical concentration limitations set forth for ROHS3 for the regulations for CE and UKCA. Following the standard - EN IEC 63000:2018.

For the current Certificate of Compliance for Hazardous Substances and additional regulatory documents, visit: <https://multitech.com/product-support/>.

## REACH-SVHC Statement

### Registration of Substances

**Multi-Tech Systems, Inc.** confirms that none of its products or packaging contain any of the Substances of Very High Concern (SVHC) on the REACH Candidate List, in a concentration above the 0.1% by weight allowable limit.

For the current REACH-SVHC statement and additional regulatory documents, visit: <https://multitech.com/product-support/>

## Waste Electrical and Electronic Equipment Statement

### WEEE Directive

The WEEE Directive places an obligation on EU-based manufacturers, distributors, retailers, and importers to take-back electronics products at the end of their useful life. A sister directive, ROHS (Restriction of Hazardous

Substances) complements the WEEE Directive by banning the presence of specific hazardous substances in the products at the design phase. The WEEE Directive covers all MultiTech products imported into the EU as of August 13, 2005. EU-based manufacturers, distributors, retailers and importers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

### Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, contact your local city office, your household waste disposal service or where you purchased the product.

July, 2005



## Information on HS/TS Substances According to Chinese Standards

In accordance with China's Administrative Measures on the Control of Pollution Caused by Electronic Information Products (EIP) # 39, also known as China RoHS, the following information is provided regarding the names and concentration levels of Toxic Substances (TS) or Hazardous Substances (HS) which may be contained in Multi-Tech Systems Inc. products relative to the EIP standards set by China's Ministry of Information Industry (MII).

### Hazardous/Toxic Substance/Elements

Name of the Component	Lead (PB)	Mercury (Hg)	Cadmium (CD)	Hexavalent Chromium (CR6+)	Polybrominated Biphenyl (PBB)	Polybrominated Diphenyl Ether (PBDE)
Printed Circuit Boards	O	O	O	O	O	O
Resistors	X	O	O	O	O	O
Capacitors	X	O	O	O	O	O
Ferrite Beads	O	O	O	O	O	O
Relays/Opticals	O	O	O	O	O	O
ICs	O	O	O	O	O	O
Diodes/ Transistors	O	O	O	O	O	O
Oscillators and Crystals	X	O	O	O	O	O
Regulator	O	O	O	O	O	O
Voltage Sensor	O	O	O	O	O	O
Transformer	O	O	O	O	O	O
Speaker	O	O	O	O	O	O
Connectors	O	O	O	O	O	O
LEDs	O	O	O	O	O	O
Screws, Nuts, and other Hardware	X	O	O	O	O	O
AC-DC Power Supplies	O	O	O	O	O	O
Software /Documentation CDs	O	O	O	O	O	O
Booklets and Paperwork	O	O	O	O	O	O
Chassis	O	O	O	O	O	O

**X** Represents that the concentration of such hazardous/toxic substance in all the units of homogeneous material of such component is higher than the SJ/Txxx-2006 Requirements for Concentration Limits.

**O** Represents that no such substances are used or that the concentration is within the aforementioned limits.

## Information on HS/TS Substances According to Chinese Standards (in Chinese)

### 依照中国标准的有毒有害物质信息

根据中华人民共和国信息产业部 (MII) 制定的电子信息产品 (EIP) 标准—中华人民共和国《电子信息产品污染控制管理办法》（第 39 号），也称作中国 RoHS, 下表列出了 Multi-Tech Systems, Inc. 产品中可能含有的有毒物质 (TS) 或有害物质 (HS) 的名称及含量水平方面的信息。

### 有害/有毒物质/元素

成分名称	铅 (PB)	汞 (Hg)	镉 (CD)	六价铬 (CR6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板	O	O	O	O	O	O
电阻器	X	O	O	O	O	O
电容器	X	O	O	O	O	O
铁氧体磁环	O	O	O	O	O	O
继电器/光学部件	O	O	O	O	O	O
ICs	O	O	O	O	O	O
二极管/晶体管	O	O	O	O	O	O
振荡器和晶振	X	O	O	O	O	O
调节器	O	O	O	O	O	O
电压传感器	O	O	O	O	O	O
变压器	O	O	O	O	O	O
扬声器	O	O	O	O	O	O
连接器	O	O	O	O	O	O
LEDs	O	O	O	O	O	O
螺丝、螺母以及其它五金件	X	O	O	O	O	O
交流-直流电源	O	O	O	O	O	O
软件/文档 CD	O	O	O	O	O	O
手册和纸页	O	O	O	O	O	O
底盘	O	O	O	O	O	O

**X** 表示所有使用类似材料的设备中有害/有毒物质的含量水平高于 SJ/Txxx-2006 限量要求。

**O** 表示不含该物质或者该物质的含量水平在上述限量要求之内。

## Revision History

Revision Number	Description	Revision Date
1.2	Added Carrier Specific Notice, Firmware Over the Air (FOTA).	July 2024
1.1	Updated antenna connector description.	September 2022
1.0	Original publication.	February 2022